

WDG 58R: Montageanleitung Drehgeber,

Assembly instructions shaft encoder, Notice de montage codeur rotatif à arbre plein, Instrucciones de montaje encoder ad albero pieno, istruzioni di montaggio encoders de eje saliente.

	-20 °C ... +80 °C / 1 Vss: -10 °C ... +70 °C	-40 °C ... +80 °C 1 Vss: -30 °C...+80 °C
	(-4 °F ... +176 °F / 1 Vss: 14 °F ... +158 °F)	(-40 °F ... +176 °F / 1 Vss: -22 °F...+176 °F)

Montage nur qualifiziertes Personal, Assembly only qualified personnel, Montage par qualifié personnel, Montaggio solo personale qualificato, Montaje solamente personal cualificado


Sicherheitsmassnahmen/Safety instructions: Einsatz nur in Industrieumgebung und NICHT im sicherheitsrelevanten Bereich. Only for use in industrial environments and NOT for safety-relevant areas. Utilisation uniquement dans un environnement industriel et PAS dans un domaine lié à la sécurité. Utilicelo sólo en entornos industriales y NO en áreas relevantes para la seguridad. Utilizzare solo in ambienti industriali e NON in aree riguardanti la sicurezza.

Power supply: Class 2 only

DIN EN 100015-1


Montage, Assembly, Montage, Montaje, Montaggio.

58R

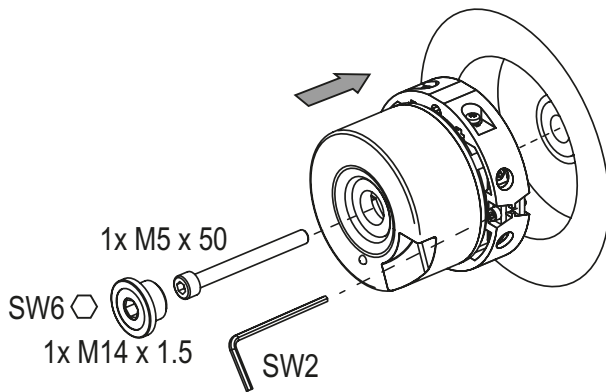

	R1	
	R2	
Kabel Ø cable, Câble, Cable, cavo	R1	R2
6 mm	30 mm	90 mm
Temperatur Temperature, Température, Temperatura, Temperatura	T > -40 °C (-40 °F)	T > -10 °C (-14 °F)

Demontage, Disassembly, Démontage, Desmontaje, Smontaggio.

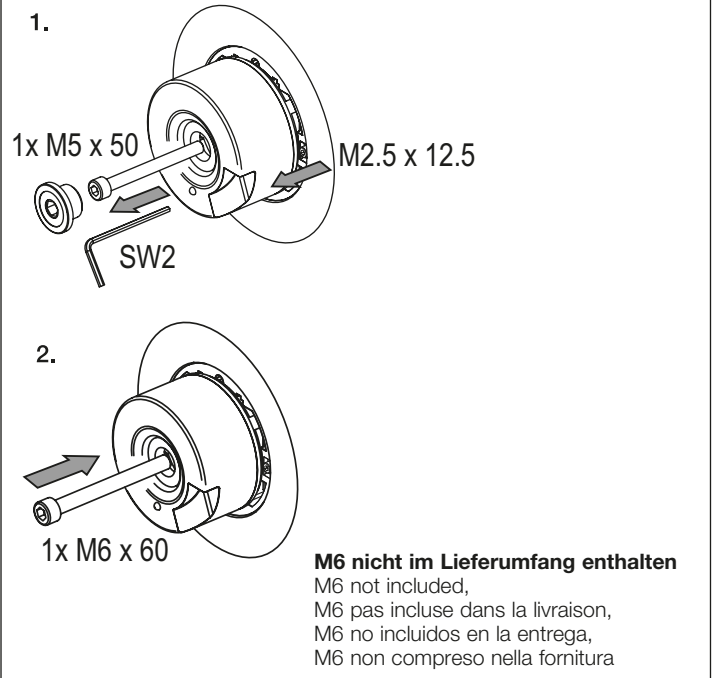

Gewinde (8.8) Screw thread, Filet, Rosca, filetto	Empfohlenes Anzugsdrehmoment Recommended starting torque Moment de rotation recommandé appliqué à l'écrou Par de apriete recomendado coppia di spunto consigliata
M2.5	1.5 Nm
M3	1 Nm
M4	2 Nm
M5, M14	3 Nm
M6	6 Nm
Mutter, Screw nut, écrou, Tuerca, dado, M20x1,5	8 Nm

Standard	F _r max.	F _a max.
WDG58R	80 N	60 N

